



# MULTILINER SP

## REFILL + REPLACE TIPS

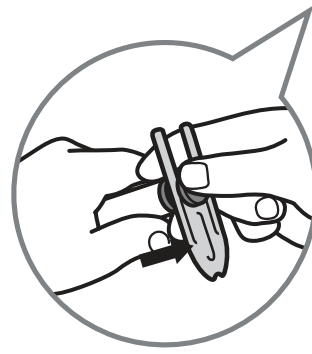

SP Changer

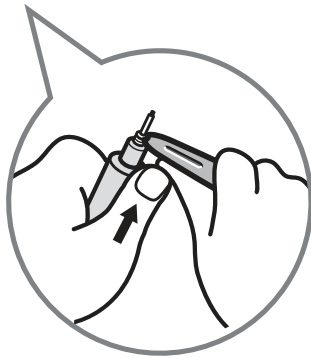

SP Changer

### Nibs:

1. Using the Changer tool, pull the nib straight out.
2. Insert the new nib carefully, making sure to line the wick up correctly.
3. Ink will flow in a few moments.

### Refill Cartridge:

1. Remove the nib. Using the broad opening on the Changer tool, pull the cartridge away from the body of the pen.
2. Pull the protective cap off of the new cartridge & insert into pen.
3. Replace with the same nib or a new nib.
4. Ink will flow in a few moments.

**Be Careful!**



- Frequent removal of nibs will cause poor contact with ink
- Only remove nibs when they need to be replaced
- Do not use dry or bent nibs

For questions or comments contact us at Copic Marker Australia  
Email: [info@copicmarker.com.au](mailto:info@copicmarker.com.au) or visit [www.copicmarker.com.au](http://www.copicmarker.com.au)  
Copyright © 2014 Imagination International, Inc. All Rights Reserved

**.Too** Copic is a registered trademark of Too Corporation, Japan. All rights reserved.

**COPIC**<sup>®</sup>